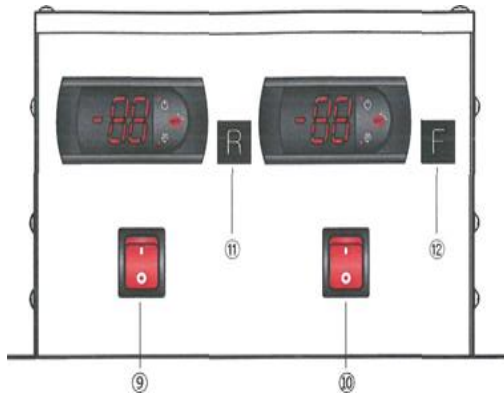


HOW TO OPERATE TEMPERATURE CONTROLLER OF CAREL



How to operate the temperature controller

1. Make sure the power is 220V and plug in the cord.

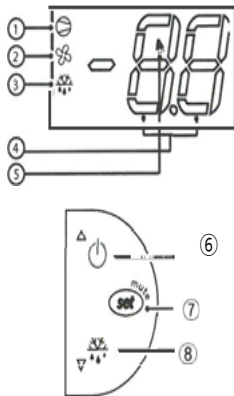
2. Press the **ON/OFF** switch button 

The digital screen displays the current temperature and the refrigerator Operates (initial operation: operates for 1 minute)

3. When resetting the temperature, press the **'SET'** button for more than 1 second. The set temperature blinks, and when raising or lowering the temperature, press the **▲** or **▼** button.

Then press the **'SET'** button to save the newly set value.

4. Recommended operating temperature is refrigerated: 4°C, frozen: -20°C



1) Displayed when the cooler is running. (If blinking, waiting)

2) Displayed when the cooling fan operates. (If blinking, waiting)

3) Displayed when defrosting begins.

4) Temperature display LED. (-99°C~99°C)

5) Displayed when an error occurs (warning alarm)

6) Used when selecting power and input values.

7) Used when starting or ending settings.

 


 
8) Used when selecting manual defrost and input values.


9) 10) Main power switch between refrigeration and freezing

 
 
11) 12) Refrigerated (R) and frozen (F) compartment classification mark


1. Make sure the power source is 220V and plug in the cord.

2. When the main switch is turned **on**, it will be displayed alternately **oFF** and **the current temperature** in the temperature c


3. When you press the button  for 3 seconds, the **on** sign will appear, and after a while, a picture   will appear in the temperature display window and the **current temperature** will be displayed. (The operating status  sign will blink for 1 minute.)

4. a. When the button  is pressed for 1 second, the sign "**set**" appears on the temperature display window, and after a while, the previous set temperature is displayed blinking.

b. At this time, press the  or key  to set the temperature.

c. Press the key  to exit the temperature setting screen.

※The maximum temperature setting range for the refrigerated compartment and frozen compartment is (0°C~12°C, -23°C~12°C) respectively.

※ Defrost function (cooler defrost, removal): The picture , **df**, and **interior temperature** are shown blinking on the temperature display window. It is not a malfunction and is 'operating normally'.

However, if it operates for an excessively long time and the temperature rises significantly, contact the place of purchase or A/S center.

※ Warning alarm: If a mark is displayed on the temperature display window and the alarm code (e.g. EO) blinks, contact the place of purchase or A/S center